



Buy it for looks. Buy it for life.®

INS10437 - 3/15



INS10437

For uninterrupted use of your MotionSense™ faucet:

Moen recommends you mount the battery holder or leave it mounted as shown. In the event of a power outage, unplug the AC adapter cable and plug in the cable from the battery holder. When power resumes, reconnect AC adapter cable.

Para usar su mezcladora MotionSense™ en forma ininterrumpida:

Moen le recomienda que monte el soporte para pilas o que lo deje montado como se ilustra. En caso de corte del suministro eléctrico, desenchufe el cable del adaptador CA y enchufe el cable del soporte para pilas. Una vez restablecido el suministro, reconecte el cable del adaptador CA.


Pour une utilisation ininterrompue de votre robinet MotionSense^{MC}:

Moen recommande que vous installiez le porte-piles ou le laissez installé comme illustré. En cas de panne d'électricité, débrancher le câble de l'adaptateur c.a. et brancher le câble du porte-piles. Lorsque l'électricité sera rétablie, rebrancher le câble de l'adaptateur c.a.

Battery Power Installation

Instalación de la energía a pilas

Installation - Alimentation par piles

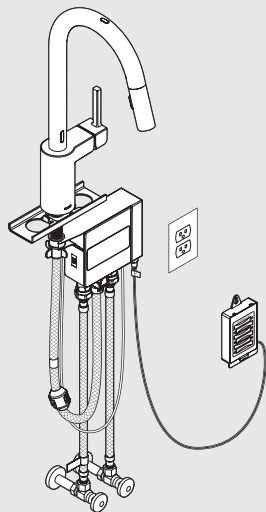

AC Power Installation

Instalación de la energía CA

Installation - Alimentation par courant alternatif

