

SECUREMOUNT™

Easy, Secure Install – Anywhere on the Wall!™

Award Winning Engineering

Building Products Top 100
2008

Home Safety Council's
Product Innovation for
Consumer Safety Award
2008

Home Magazine
Kitchen and Bath Award
2006

Building Products
Most Valuable Product
"MVP" Award
2006

Handy Magazine
Innovation Award
2006

Handy Magazine
Seal of Approval

SECUREMOUNT™
Easy, Secure Install – Anywhere on the Wall!™



UL Recognized

Moen Incorporated © 2008. SecureMount is a trademark of Moen Incorporated.



easy
installation



uncompromising
strength

stud-free
versatility

SecureMount™ anchors



Now there is no reason to settle for limited placement of flat panel TV's.

Introducing SecureMount™ anchors.

Featuring easy installation, SecureMount anchors help you install flat panel televisions, up to 150 lbs. (68 kg), anywhere on the wall. No wall stud required!

SecureMount anchors' precise engineering lets you install them easily and mount flat panel TV's with confidence. The secret to these D-shaped anchors is the optimal bracing behind the wall, allowing for quick installation into 1/2" drywall and precise placement – anywhere on the wall.

Simply follow a few basic installation steps and stop worrying about frustrating installations.

Install confidently with SecureMount anchors' uncompromising strength and versatility that will satisfy your customers and not add additional installation time for you.

Easy installation

Stud-free versatility

Uncompromising strength

Greater possibilities

Satisfied customers

Independently tested



Securely anchors flat panel TV's up to 150 lbs. – without a stud!



Installing SecureMount™ anchors

1. Choose a location – anywhere on the wall
2. Drill a hole and secure the anchor – smart design makes it fast and hassle-free.
3. Mount the bracket and TV – confident the unit is secure and your customer is satisfied.

Parts List:

- SecureMount™ anchor (2)
- Guide sleeve (2)
- Pull tab (1)
- Anchor screw – M6 x 50mm long (2)

Tools Required:

- Phillips screwdriver
- 1-1/4" hole saw
- Drill
- Stud finder
- Level
- Pencil


Surface Requirements:

- 1/2" drywall
- Open space behind the wall (at least 3-1/2" deep)


Usage Restrictions:

- If using two SecureMount anchors in close vertical proximity to each other, there MUST be a minimum of 3.75" space between their respective anchor screws.
- SecureMount is NOT recommended for use with TV brackets that: Articulate | Pivot | Swivel

Drill hole

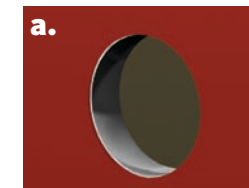




Insert guide

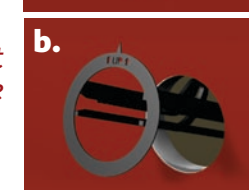

Insert anchor



Pull anchor tight

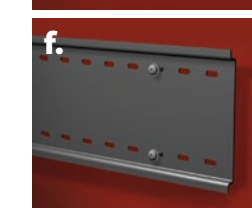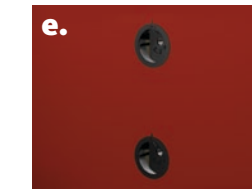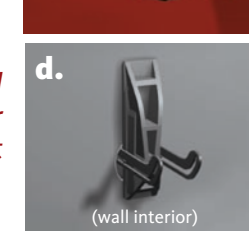

Repeat steps a-d as needed

Mount TV bracket

Easy, Secure Install – Anywhere on the Wall!™