

Porcelana Technical Specification


Robe Hook

9320

Stock Numbers:

- 9320W – Robe Hook
White Finish
Concealed Screw Mounting

Dimensions:

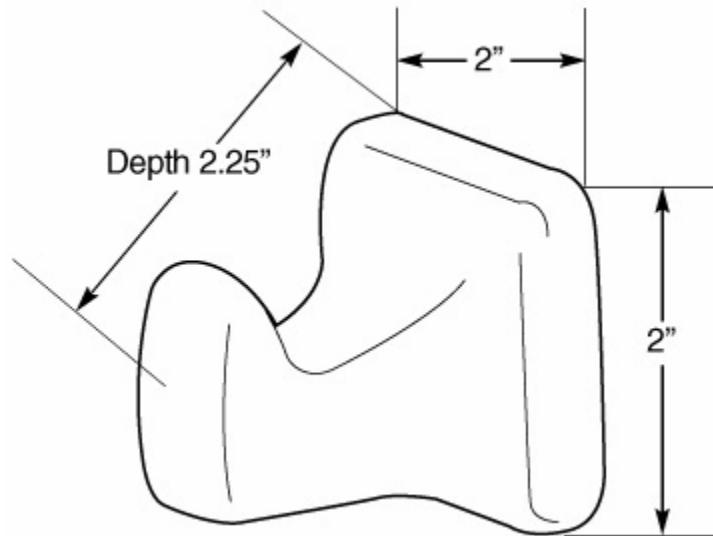

Materials:

Robe Hook is made from the highest quality vitreous ceramic.

Installation Instructions:

1. Position unit on wall in desired location.
2. Lightly outline the base of the unit.
3. Center mounting bracket inside the outline.
4. Mark hole locations. Attach bracket to wall using 1 1/2" screws (provided).
5. Slide unit onto bracket from above

Note: Wood blocking is preferable behind all wall surfaces.

If wood blocking is not available, the following optional fasteners are suggested:
Tile/Masonry – Plastic or Lead Anchors; Plaster/Drywall – Toggle Bolts.

Cleaning Instructions:

To preserve the fine finish of this product, clean only with a soft damp cloth. Dry well. Do not use commercial or abrasive cleaners.

Stock Number: _____ Robe Hook
By CSI Bath Furnishings


Creative Specialties
International

25300 AL MOEN DRIVE • NORTH OLMSTED, OH 44070 (800) 321-8809 •

FAX: (800) 848-6636 • INTERNATIONAL: (440) 962-2000 •

FAX: (440) 962-2726 CUSTOMER SERVICE (USA): 800-882-0116

©Copyright CSI Bath Furnishing Division of Moen 02/22/01

Literature #BA1039