

Villeta Technical Specification


Robe Hook

YB3603

Stock Numbers:

- q **Y3603CH – Robe Hook**
Chrome Finish, Retail Packaging
- q **YB3603CH – Robe Hook**
Chrome Finish, Wholesale Packaging
- q **YB3603CP – Robe Hook**
Chrome & Polished Brass Finish,
Wholesale Packaging
- q **Y3603PMC – Robe Hook**
Platinum & Chrome Finish, Retail
Packaging
- q **YB3603PMC – Robe Hook**
Platinum & Chrome Finish, Wholesale
Packaging

Dimensions:

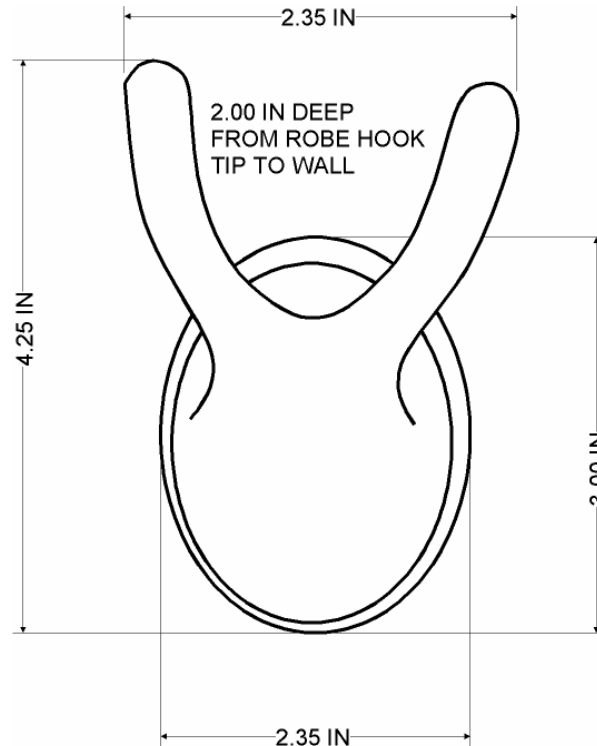

Materials:

Robe Hook is constructed of zinc.

Installation Instructions:

1. Remove the mounting base by loosening the set screw.
2. Position the mounting base on the wall at desired location.
3. One at a time, place each anchor screw through the mounting plate, centered in each large hole. Using a Phillips screwdriver, turn the anchor screw while applying pressure. Screw will self drill and tap into drywall. Do not over tighten.
4. Place assembly over the mounting post, setscrew facing down.
5. Tighten setscrew.

Cleaning Instructions:

To preserve the fine finish of this product, clean only with a soft damp cloth. Dry well. Do not use commercial or abrasive cleaners.

Stock Number: _____ **Robe Hook**
By CSI Bath Furnishings



25300 AL MOEN DRIVE • NORTH OLMS TED, OH 44070
CORPORATE HEADQUARTERS: (800) 321-8809 • FAX: (800) 848-6636
INTERNATIONAL: (440) 962-2000 • FAX: (440) 962-2726
CUSTOMER SERVICE (USA): 800-882-0116 • FAX: (888) 379-2720
WWW.CSI.MOEN.COM

©Copyright Creative Specialties International 2006

Literature #BA1218