MOEN

MB058

Buy it for looks. Buy it for life.®

Slip Fit Spouts

WITH THE "O"-RING SEAL

The spouts are specifically designed to permit the use of copper water tube on drops and lookouts.

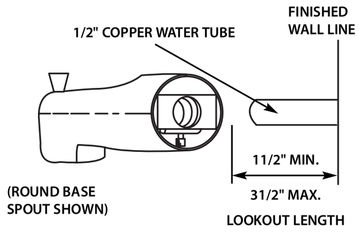

Lookout must be free from deep scratches, dents, kinks or bends. The cut-off end must be free from burrs inside and out. The edge must not be rolled inward from a dull tubing cutter.

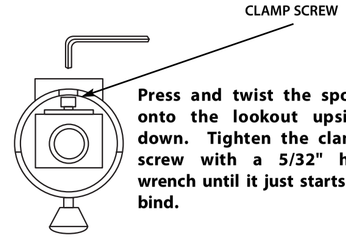

Press and twist the spout onto the lookout upside down. Tighten the clamp screw with a 5/32" hex wrench until it just starts to bind.

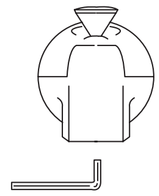

Turn spout upright into position against the wall and finish tightening the clamp screw by hand. The use of pliers or another wrench on the hex wrench is not necessary. Do not overtighten.

© Copyright, 1995
Moen Incorporated
Printed in U.S.A.

MB058 MAR 95

MOEN

MB058

Buy it for looks. Buy it for life.®

Slip Fit Spouts

WITH THE "O"-RING SEAL

The spouts are specifically designed to permit the use of copper water tube on drops and lookouts.

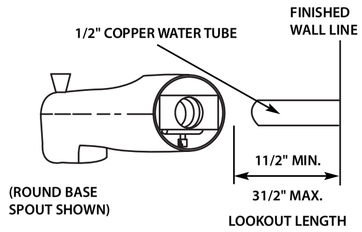

Lookout must be free from deep scratches, dents, kinks or bends. The cut-off end must be free from burrs inside and out. The edge must not be rolled inward from a dull tubing cutter.

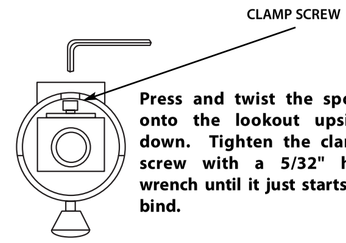

Press and twist the spout onto the lookout upside down. Tighten the clamp screw with a 5/32" hex wrench until it just starts to bind.

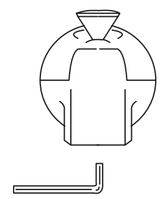

Turn spout upright into position against the wall and finish tightening the clamp screw by hand. The use of pliers or another wrench on the hex wrench is not necessary. Do not overtighten.

© Copyright, 1995
Moen Incorporated
Printed in U.S.A.

MB058 MAR 95

MOEN

MB058

Buy it for looks. Buy it for life.®

Slip Fit Spouts

WITH THE "O"-RING SEAL

The spouts are specifically designed to permit the use of copper water tube on drops and lookouts.

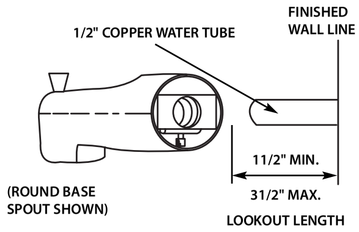

Lookout must be free from deep scratches, dents, kinks or bends. The cut-off end must be free from burrs inside and out. The edge must not be rolled inward from a dull tubing cutter.

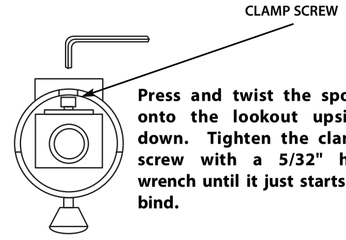

Press and twist the spout onto the lookout upside down. Tighten the clamp screw with a 5/32" hex wrench until it just starts to bind.

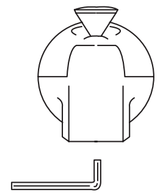

Turn spout upright into position against the wall and finish tightening the clamp screw by hand. The use of pliers or another wrench on the hex wrench is not necessary. Do not overtighten.

© Copyright, 1995
Moen Incorporated
Printed in U.S.A.

MB058 MAR 95

MOEN

MB058

Buy it for looks. Buy it for life.®

Slip Fit Spouts

WITH THE "O"-RING SEAL

The spouts are specifically designed to permit the use of copper water tube on drops and lookouts.

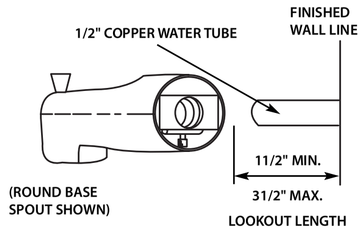

Lookout must be free from deep scratches, dents, kinks or bends. The cut-off end must be free from burrs inside and out. The edge must not be rolled inward from a dull tubing cutter.

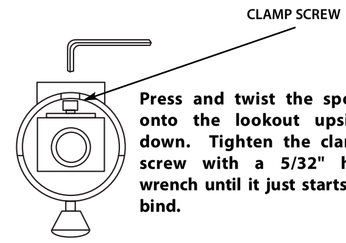

Press and twist the spout onto the lookout upside down. Tighten the clamp screw with a 5/32" hex wrench until it just starts to bind.

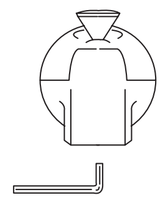

Turn spout upright into position against the wall and finish tightening the clamp screw by hand. The use of pliers or another wrench on the hex wrench is not necessary. Do not overtighten.

© Copyright, 1995
Moen Incorporated
Printed in U.S.A.

MB058 MAR 95

MOEN

MB058

Buy it for looks. Buy it for life.®

Slip Fit Spouts

WITH THE "O"-RING SEAL

The spouts are specifically designed to permit the use of copper water tube on drops and lookouts.

Lookout must be free from deep scratches, dents, kinks or bends. The cut-off end must be free from burrs inside and out. The edge must not be rolled inward from a dull tubing cutter.

Press and twist the spout onto the lookout upside down. Tighten the clamp screw with a 5/32" hex wrench until it just starts to bind.

Turn spout upright into position against the wall and finish tightening the clamp screw by hand. The use of pliers or another wrench on the hex wrench is not necessary. Do not overtighten.

© Copyright, 1995
Moen Incorporated
Printed in U.S.A.

MB058 MAR 95

MOEN

MB058

Buy it for looks. Buy it for life.®

Slip Fit Spouts

WITH THE "O"-RING SEAL

The spouts are specifically designed to permit the use of copper water tube on drops and lookouts.

Lookout must be free from deep scratches, dents, kinks or bends. The cut-off end must be free from burrs inside and out. The edge must not be rolled inward from a dull tubing cutter.

Press and twist the spout onto the lookout upside down. Tighten the clamp screw with a 5/32" hex wrench until it just starts to bind.

Turn spout upright into position against the wall and finish tightening the clamp screw by hand. The use of pliers or another wrench on the hex wrench is not necessary. Do not overtighten.

© Copyright, 1995
Moen Incorporated
Printed in U.S.A.

MB058 MAR 95

MB058

MOEN

Buy it for looks. Buy it for life.®

Bec à Enclenchement

MUNI D'UN JOINT TORIQUE

Ce bec est conçu pour permettre l'usage d'adduction d'eau en cuivre pour les manchons MOEN.

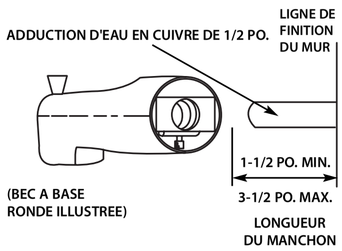

Le manchon ne doit pas avoir d'éraflures profondes, de brèches, de tortillements ou de courbures. Le bout du manchon doit débarrassé de toutes ébarburres à l'intérieur comme l'extérieur. Utiliser un coupe-tuyaux en bonne condition.

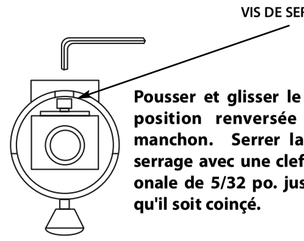

Pousser et glisser le bec en position renversée sur le manchon. Serrer la vis de serrage avec une clef hexagonale de 5/32 po. jusqu'à ce qu'il soit coinçé.

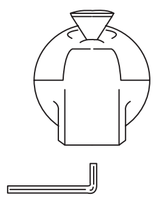

Tourner le bec vers le haut contre le mur et terminer le blocage de la vis de serrage. Ne pas utiliser de clef ou de pinces sur la clef hexagonale. Ne pas serrer trop fort.

© Copyright, 1995
Moen Incorporated
Printed in U.S.A.

MB058 MAR 95

MB058

MOEN

Buy it for looks. Buy it for life.®

Bec à Enclenchement

MUNI D'UN JOINT TORIQUE

Ce bec est conçu pour permettre l'usage d'adduction d'eau en cuivre pour les manchons MOEN.

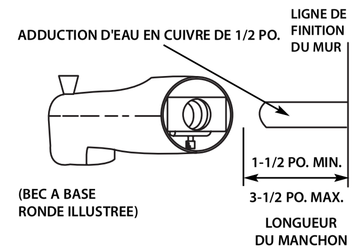

Le manchon ne doit pas avoir d'éraflures profondes, de brèches, de tortillements ou de courbures. Le bout du manchon doit débarrassé de toutes ébarburres à l'intérieur comme l'extérieur. Utiliser un coupe-tuyaux en bonne condition.

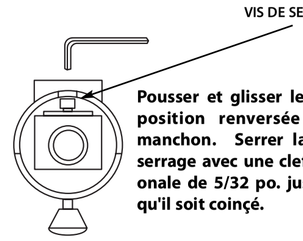

Pousser et glisser le bec en position renversée sur le manchon. Serrer la vis de serrage avec une clef hexagonale de 5/32 po. jusqu'à ce qu'il soit coinçé.

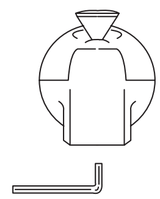

Tourner le bec vers le haut contre le mur et terminer le blocage de la vis de serrage. Ne pas utiliser de clef ou de pinces sur la clef hexagonale. Ne pas serrer trop fort.

© Copyright, 1995
Moen Incorporated
Printed in U.S.A.

MB058 MAR 95