


INSTALLATION INSTRUCTIONS

THESE INSTRUCTIONS MUST BE
LEFT WITH HOMEOWNERSPOUT O-RING REPLACEMENT KIT
FOR KITCHEN FAUCET MODELS

NOTE: On older model faucets there will be a retainer nut and separate grooved sleeve, replace these with PN. 92309, a one piece retainer pivot nut.



PN 92309

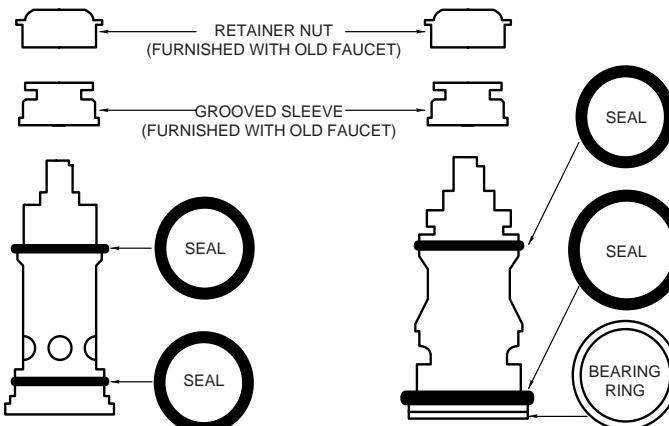

Disassembly

1. **CAUTION:** Turn "OFF" both hot and cold water supplies. Turn faucet on to alleviate water pressure. Pull handle cap up and off (it snaps into place). Remove the handle screw.
2. Lift and **tilt** handle lever and handle body off. Leave handle inside the body.
3. Remove retainer pivot nut. (**Older models may have retainer nut and separate grooved sleeve**).
4. Lift and twist spout off.

Reassembly

1. Replace O-Ring seals on spout body, use silicone grease (supplied) when installing.
2. Replace spout. Push down until it nearly touches the faucet escutcheon.
3. Screw on retainer pivot nut. (**If you have an older model faucet with a retainer nut and separate grooved sleeve replace these with PN 92309, a one piece retainer pivot nut**). DO NOT CROSS THREAD. Tighten snug.
4. Press cartridge stem down. **Holding handle UP**, Figure 1, hook handle ring (inside the handle body) into groove on the retainer pivot nut.
5. Swing handle back and forth until it drops down into place.
6. Replace handle screw. Tighten securely. Push handle cap down until it snaps into place.

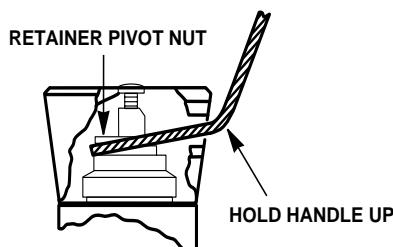


FIGURE 1

To Eliminate Cross-Piping On Back-To-Back Installations, or To Correct Reversed Rough-In Where Hot and Cold Positions Are Reversed: Remove handle cap, handle screw and handle assembly (see "Disassembly" instructions). Turn valve stem around so that the notched flat is turned one half turn or 180°. Re-install handle parts (see "Reassembly").

SPOUT O-RING REPLACEMENT KIT FOR KITCHEN FAUCET MODELS

(7200 MODEL SERIES ONLY)


Disassembly

Turn OFF both hot and cold water supplies, then open faucet to relieve pressure and insure that water has been COMPLETELY shut off.

1. Pry off handle cover carefully with flatbladed instrument.
2. Remove handle screw, using Phillips screwdriver.
3. Lifting up on handle connector, lift handle up and off.
4. Unscrew and remove collar and pivot retainer.
5. Unscrew and remove retainer nut, and thrust washer (PN99738 spanner wrench available if required for old style retainer nut).
6. Lift spout off (for diverter models, remove diverter to replace o-ring seals).

Reassembly

1. Replace O-Ring seals on valve body, use silicone grease (supplied) when installing.
2. Replace diverter if diverter model, then replace spout. Push down until it nearly touches the faucet escutcheon.
3. Replace retainer nut, and thrust washer, tighten with wrench.
4. Re-install pivot retainer with grooves facing the back of the faucet. Replace the collar, tighten snugly by hand.
5. With cartridge stem notch facing the front of the faucet, hook handle lug into pivot retainer groove. Align handle connector with cartridge stem and gently press handle onto cartridge stem.
6. Replace handle screw and press on handle cap.

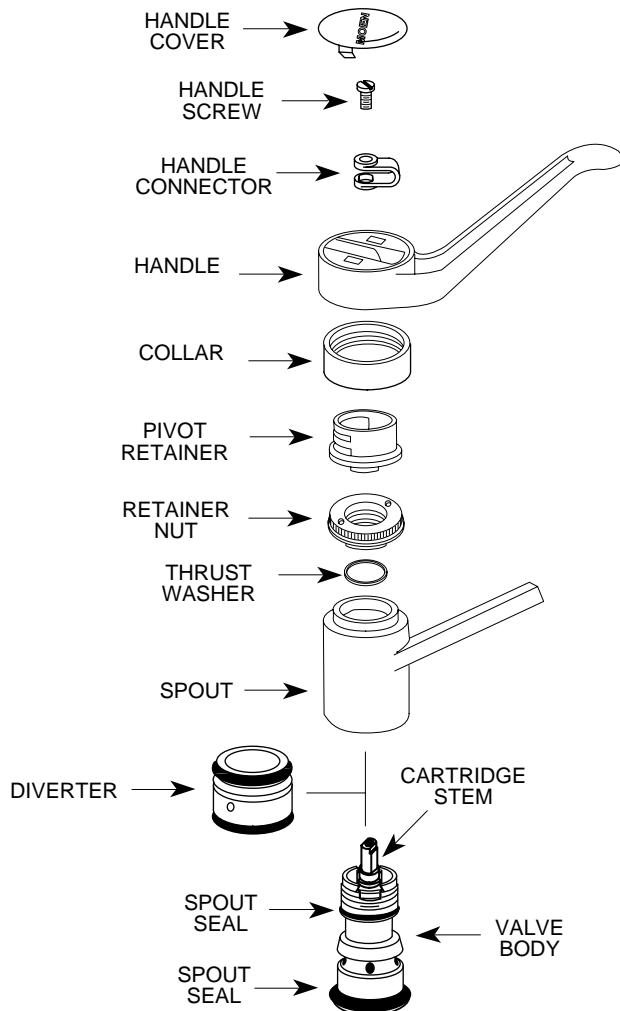

To Eliminate Cross-Piping On Back-To-Back Installations, or To Correct Reversed Rough-In Where Hot and Cold Positions Are Reversed: Remove handle cap, handle screw and handle assembly (see "Disassembly" instructions). Turn valve stem around so that the notched flat is turned one half turn or 180°. Re-install handle parts (see "Reassembly").

HELPLINE: Call our toll free Helpline number,



(800) 321-6636;

for answers to any product, installation, replacement parts, or warranty questions.

 **MOEN**[®]
377 WOODLAND AVE., ELYRIA, OH. 44035, U.S.A.

© Copyright, 1991
Moen Incorporated
Printed in U.S.A.