Gilmour™ Technical Specification Pivoting Paper Holder Y6308


Stock Numbers:

 Y63008BN – Pivoting Paper Holder Brushed Nickel Finish

Materials:

Paper Holder is constructed of zinc.

Dimensions:

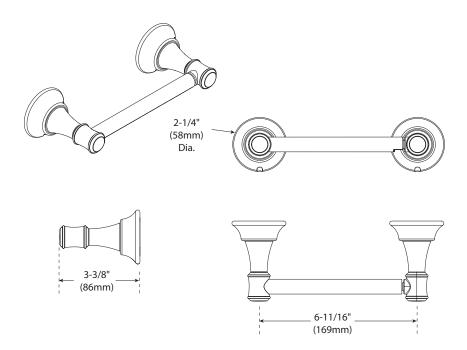

Installation Instructions:

- Position the mounting template on the wall in the desired location.
 Using a level, align the template and tape it to the wall.
- Remove each mounting post from the body by loosening the set screw.
- 3. Place each mounting post on the template with notch facing down.
- 4. Mark the 2 large hole locations of each mounting bracket.
- 5. Attach each mounting bracket to the wall, using the wall anchors provided.
- 6. Mount each base on the corresponding mounting bracket. Check and make sure that the base set screw hole(s) are facing down. Assemble a set screw to each base. Use the allen wrench included in hardware kit to tighten each set screw and secure the assembly to the mounting bracket(s).
- 7. Tighten all 4 screws. Do not over tighten.
- Place each post over the mounting plate (set screw down). Pivoting post with bar to be on left side. Tighten both set screws.

Cleaning Instructions:

To preserve the fine finish of this product, clean only with a soft damp cloth. Dry well. Do not use commercial or abrasive cleaners.

Stock Number:	Paper Holder
By Moen Incorporated	·



25300 AL MOEN DRIVE • NORTH OLMSTED, OH 44070 CORPORATE HEADQUARTERS: (800) 321-8809 • FAX: (800) 848-6636 INTERNATIONAL: (440) 962-2000 • FAX: (440) 962-2726 CUSTOMER SERVICE (USA): 800-882-0116 • FAX: (888) 379-2720 WWW.MOEN.COM

© 2019 Moen Incorporated. Moen is a registered trademark and Gilmour is a trademark of Moen Incorporated. All rights reserved.